



## Fahrenheit to Celsius

**Not Applicable to 2G Model (CoolBot with cables on top and side)**

- Press the right arrow until the Program light is lit.



- Press the checkmark 5 times ( Pro/ 6.5 /6.4). You will see P1 blinking.  
Press 3 times for the 6.3 version. You will see FC blinking.  
Press 1 time for the 6.1 version. You will see FC blinking.



- Press the right arrow until you see P2 blinking.



- Press the checkmark and your current temperature scale will blink.



- Choose your Temperature Scale of preference with the arrows



- Press chekmark to select it. P2 will blink.
- Do not press any buttons and the CoolBot will revert to the Room mode.

Watch our [Changing Between Fahrenheit and Celsius Video](#)