

CoolBot[®]

Heater Test

Not Applicable to 2G Model (CoolBot with cables on top and side)

A Heater light blinking is NORMAL.

If you suspect that your Heater Cable is not working correctly or is bad, there is a very simple way to test whether it is good or not. There is no “happy medium” for the Heater Cable, it is either good or bad.

- Remove the Heater Cable from the foil.




- Unplug the CoolBot from the power supply



- Plug your CoolBot back in.



- Press the Heater Cable tip against your wrist.
You will see the Heater Light (next to Power) come on solid for about 20 seconds.

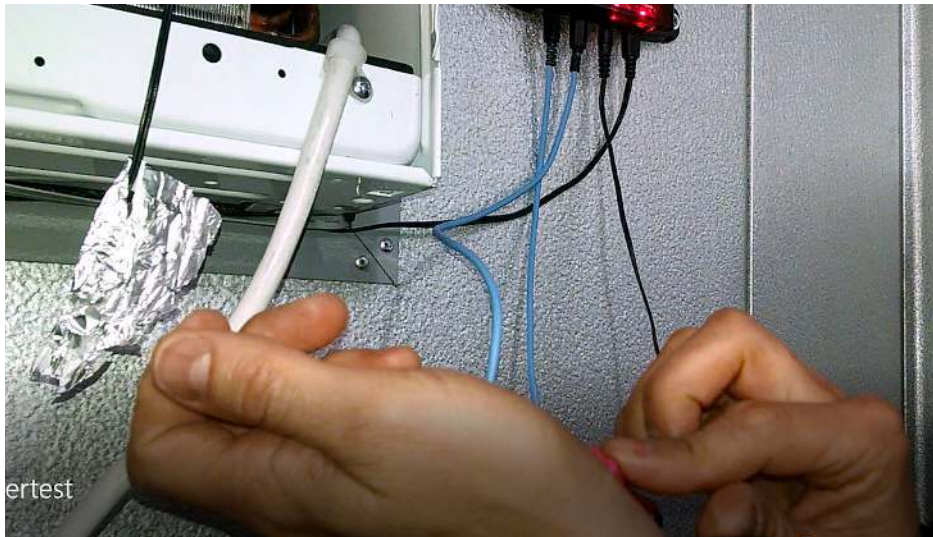

- **Is it hot?**
 - **Yes.** Then the Heater Cable is GOOD
 - **No.** Check your Heater Cable connection and repeat the test.

If your Heater Cable failed to heat up after a CoolBot power start then the Heater Cable is BAD

Watch our [Heater Test Video](#)

To get a replacement Heater Cable under warranty (1 Year) please email support@storeitcold.com

To order a new Heater Cable please go to: <https://www.storeitcold.com/coolbot-accessories/>